


Tools required

- philips screwdriver
- small level
- tape measure

Instructions

1. Locate the top and centre where you want the sign to hang. (*see figure 1.*)
2. Measure down 1 ¾" and scribe a level line approximately 4" on either side of the centreline.
3. *Place mounting bracket*
4. Remove clear and white acrylic and then drill 2 holes through the back pan near top and bottom into the wall. (*see figure 1.*)
5. Mark centre of both holes. (*see figure 1.*)
 - a. For drywall or plaster then use anchor.
 - b. For solid wood simply screw into place with wood screws.
 - c. For masonry use rawl plug or tap-con or other typical fastener.
6. Centre sign to desired location.
7. Remove sign and add rawl plugs (not provided) if required.
8. Replace sign and fix screws into place.
11. Remove protective coating from outer clear acrylic face.
12. Place graphic between poster white and clear sheet. (*note: if graphic is larger than acrylic then use acrylic as a template and trim graphic with razor knife.*)
14. Replace sandwich into slots and close all sides.
13. To clean clear acrylic, ensure the use of a non-petroleum base or non-abrasive cleaner.

Note: You may install sign through sign back as per any cabinet installation i.e.: locating studs and transfer stud locations onto sign back, pre-drilling and screwing to wall.

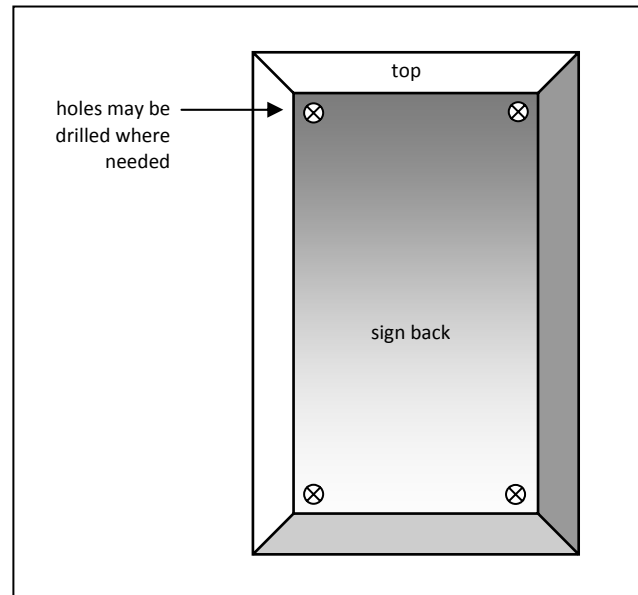

Important!

This sign is intended to be installed in accordance with the requirements of Article 600 of the National Electrical Code and/or other application local codes. This includes proper grounding and bonding of the signs.